

Installation, Operating and Servicing Instructions

Panther Hot Cupboards P6B2, P6B3, P6B4, P6B5, P6P2, P6P3, P6P4, P6P5, P8B3,P8B3PT, P8B4, P8B4PT, P8B5, P8B5PT, P8B6, P8B6PT, P8P3, P8P3PT, P8P4, P8P4PT, P8P5, P8P5PT, P8P6, P8P6PT

Please make a note of your product details for future use:

Date Purchased:\_\_\_\_\_\_

Model Number:\_\_\_\_\_\_

Serial Number:\_\_\_\_\_\_

Dealer:\_\_\_\_\_\_



# **CONTENTS**

Important Information	2
Warnings and Precautions	3
Technical Data	3 - 4
Checklist of Enclosures	5
Installation and Commissioning	5-8
Operating Instructions	8 - 10
Cleaning	10
Servicing, Maintenance and Component Replacement	11
Fault Finding	11
Spare Parts List	12-13
Accessories	13
Service Information and Guarantee	14

# IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



#### **WARNING!**

This symbol is used whenever there is a risk of personal injury.



#### **CAUTION!**

This symbol is used whenever there is a risk of damaging your Lincat product.



#### NOTE:

This symbol is used to provide additional information, hints and tips.

## **KEEP THIS MANUAL FOR FUTURE REFERENCE**

# **WARNINGS AND PRECAUTIONS**



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

# **TECHNICAL DATA**

Codes Explained

Р	6 or 8	B or P	2, 3, 4, 5 or 6	PT
Panther	Unit Depth	Bain Marie or	Number of	Pass - Through
		Plain top	1/1 Gastronorms	model

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
P6B2		900		80
P6B3		1125		95
P6B4		1450		116
P6B5		1775	670	136
P6P2		900	070	71
P6P3		1125		86
P6P4		1450		105
P6P5		1775		124
P8B3	900	1125		104
P8B3PT	900	1125		106
P8B4		1450		125
P8B4PT		1450		127
P8B5		1775	800	146
P8B5PT		1775	800	148
P8B6		2100		166
P8B6PT		2100		168
P8P3		1125		92
P8P3PT		1125		94

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
P8P4		1450		114
P8P4PT	000	1450	900	116
P8P5		1775		136
P8P5PT	900	1775	800	138
P8P6		2100		158
P8P6PT		2100		160

#### Overshelves

Model	Heated/Ambient	No.	Height	Width	Depth	Weight (kg)												
		shelves	(mm)	(mm)	(mm)													
PS83A1				1125		7												
PS84A1		1	325	1450		9												
PS85A1		l	323	1775		11												
PS86A1				2100		13												
PS83A2				1125		14												
PS84A2	А	2	615	1450		18												
PS85A2	A	2	015	1775		22												
PS86A2				2100		26												
PS83A3				1125		21												
PS84A3		3	905	1450		27												
PS85A3		3	903	1775		33												
PS86A3				2100	320	39												
PS83H1				1125	320	10												
PS84H1		1	325	1450		13												
PS85H1		•	17	1775		16												
PS86H1																2100		19
PS83H2				1125		20												
PS84H2	Н	2	615	1450		26												
PS85H2	11	2	013	1775		32												
PS86H2				2100		38												
PS83H3				1125		27												
PS84H3		3	905	1450		35												
PS85H3		3	900	1775		48												
PS86H3				2100		57												

## Gantries

Model	Heated/Ambient	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
PG62A			900		9
PG63A			1125		12
PG64A	A		1450		16
PG65A		<b>5</b> 20	1775	460	20
PG62H		520	900	460	9
PG63H	Н		1125		12
PG64H			1450		16
PG65H			1775		20

# **CHECK LIST OF ENCLOSURES**

Warranty Card	
Instructions Manual	
Shelves – combinations to make 2 rows	
Push bar handle kit	
Gastronorm dividers (Bains Marie models only)	
Drain tube (Bains Marie models only)	

# **INSTALLATION AND COMMISSIONING**

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire Earth E
Blue wire Neutral N
Brown wire Live L

Means of isolation with at least 3mm contact separation in all poles must be incorporated into the fixed wiring of this appliance.

The fixed wiring insulation must be protected by insulated sleeving having a temperature rating of 60 Deg C.

Supply cords shall be oil resistant, sheathed flexible cable not lighter than ordinary polychloroprene or equivalent elastomer sheathed cord (code 60245 IEC 57)

Install this appliance on a level surface ensuring all vents are unobstructed.

#### **Power Ratings**

Model	Bains Marie (kW)	Cupboard (kW)	Total (kW)	Current (A) @ 230V AC
P6B2	1.1	1.5	2.6	11.3
P6B3	1.35	1.5	2.85	12.4
P6B4	2.45	2.5	4.95	21.5
P6B5	2.7	2.5	5.2	22.6
P6P2	N1/A	1.5	1.5	6.5
P6P3		1.5	1.5	6.5
P6P4	N/A	2.5	2.5	10.9
P6P5		2.5	2.5	10.9
P8B3	1.35	1.5	2.85	12.4
P8B3PT	1.35	1.5	2.85	12.4

P8B4	2.45	2.5	4.95	21.5
P8B4PT	2.45	2.5	4.95	21.5
P8B5	2.7	2.5	5.2	22.6
P8B5PT	2.7	2.5	5.2	22.6
P8B6	2.7	2.5	5.2	22.6
P8B6PT	2.7	2.5	5.2	22.6
P8P3		1.5	1.5	6.5
P8P3PT		1.5	1.5	6.5
P8P4		2.5	2.5	10.9
P8P4PT	N/A	2.5	2.5	10.9
P8P5	IN/A	2.5	2.5	10.9
P8P5PT		2.5	2.5	10.9
P8P6		2.5	2.5	10.9
P8P6PT		2.5	2.5	10.9

#### **Heated Overshelves**

Model	Power (kW)	Current (A) @ 230V AC
PS83H1	0.6	2.6
PS84H1	0.8	3.5
PS85H1	1.0	4.3
PS86H1	1.2	5.2
PS83H2	1.8	7.8
PS84H2	1.2	5.2
PS85H2	2.0	8.7
PS86H2	2.4	10.4
PS83H3	1.8	7.8
PS84H3	2.4	10.4
PS85H3	3.0	13.0
PS86H3	3.6	15.7

#### **Heated Gantries**

Model	Power (kW)	Current (A) @ 230V AC
PG62H	0.4	1.7
PG63H	0.6	2.6
PG64H	0.8	3.5
PG65H	1.0	4.3

When installing overshelf or gantry units, add additional power rating of overshelf / gantry to allow for total installation requirement.

#### **Connecting to supply**

Models of 3kW or less may be connected to the electrical supply by means of the fitted plug and lead. Models rated above 3kW, must be connected by a qualified electrician as below (Fig 1).

The electrical inlet box is fitted to the base using a hook (A) and slot (B) method. Access the box from the side and remove 2 screws (C). Pull the box towards you (D), disengaging the hooks. Lower the box (E) to access the terminal block. Disconnect and discard the attached test cables and connect the unit to a suitable supply cable. Refit the box, ensuring no wires are trapped.

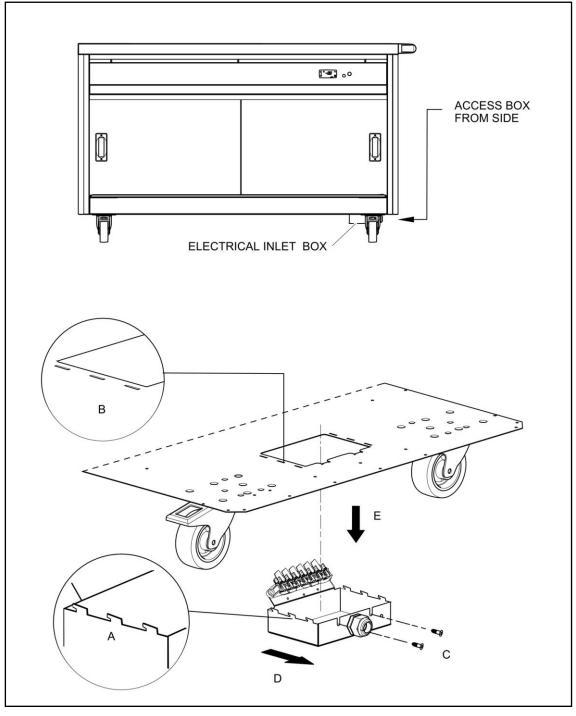


Fig 1

To fit push bar handle, using Allen keys provided firstly remove bolts at 'A' from the side of the cupboard and discard. Fit handle using bolts provided in handle kit.

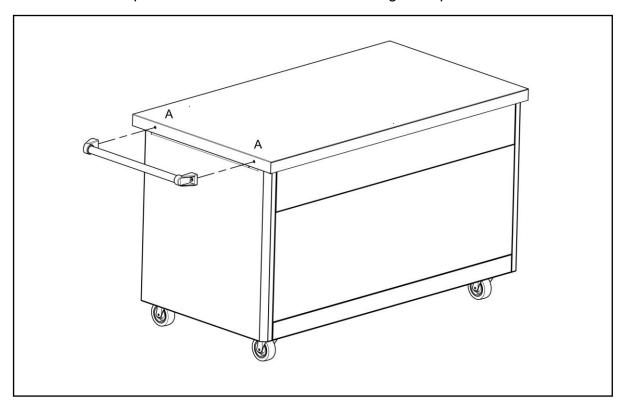


Fig 2

# **OPERATING INSTRUCTIONS**

Only qualified or trained personnel should use this appliance.

Ensuring doors are closed, switch on the power at the mains supply. The green neon illuminates to indicate power to the appliance.

#### **Electronic controller**

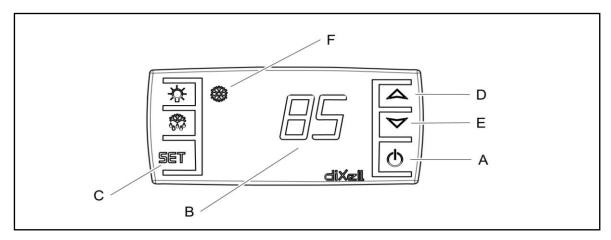


Fig 3

- A On/Off button
- B Digital readout
- C 'Set' button
- D Adjust '+'
- E Adjust '-'
- F Element 'On' symbol

The electronic controller for the cupboard has a range of 20 Deg C to 99 Deg C, and is factory set at 85 Deg C. On switching the unit on (A), the digital readout (B) displays the current temperature within the cupboard. Pressing the 'Set' button (C) once displays the temperature the cupboard is currently set to reach. To adjust this temperature, hold down the 'Set' button for 3 seconds and then set the required temperature by using the adjust buttons (D and E) on the controller. The digital readout then returns to show the current temperature.

Pre-heat the cupboard - the element symbol (F) is extinguished when the required temperature is reached.

Load the cupboard with heated food as required. The desired heat settings will be found with practice, and will depend on the amount and temperature of the food in the unit and the frequency of opening of the doors. Check food temperature regularly.

Do not attempt to transport heavy volumes of stacked crockery in the cupboard.

Do not disconnect the cupboard from the supply until it is ready to be moved to the distribution point. Re-connect as soon as the distribution point is reached.

Operation of gantries (selected models) is via the switch on the control panel (PG6 units) or the gantry overshelf (PS8 units).

To turn the unit off, switch off at the mains socket and ensure the green light has gone out.

NOTE

A small bowl of water placed on the bottom shelf once the appliance is stationary will help prevent food drying out.

#### Additional instructions for Models with Bains Marie tops.

Bains Marie may be used either dry or wet – best results are obtained when used wet. Temperature is controlled via 1-6 settings on the control knob.

For dry heat, ensure gastronorm dishes are in place then allow unit to heat up for 20 minutes on full before filling with hot food.

To use wet, fill the tank up to the high level mark with hot water (40 Deg C). With gastronorm dishes in place, allow a further 60 minutes on full for the water to reach optimum heat before filling with hot food. Maintain the water level above the minimum mark.

After use and with the appliance turned off, allow the water to cool and use the drain tube provided to empty the water well via the valve inside the cupboard. Clean out the tank and refill with fresh water on a regularly.

Operation of tray slide (Selected models only).

- 1. Lift up.
- 2. Rotate down.

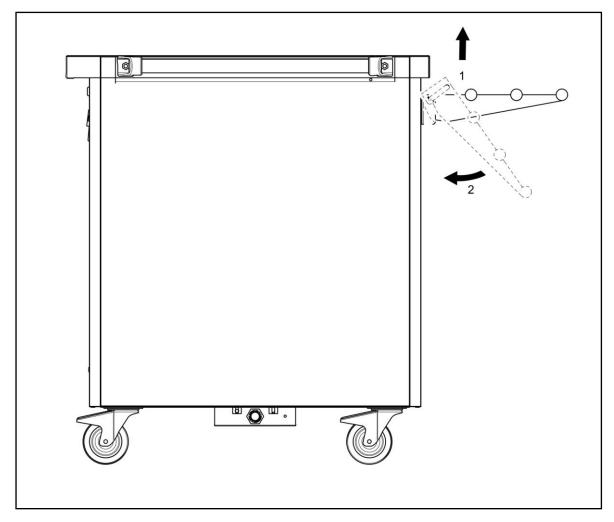


Fig 4

# **CLEANING**



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent; do not use abrasive materials. Dry with a soft cloth.

To access the inside of the cupboard for cleaning, remove the doors as shown overleaf.

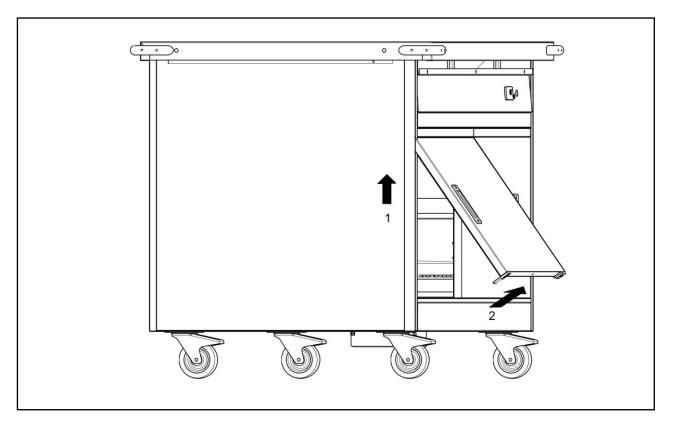


Fig 5

- 1. Lift door up in to top guide.
- 2. Rotate door bottom to lift clear of bottom guide.

Reverse procedure to refit.

Clean the door sliders to ensure smooth operation of the doors.

# SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on these appliances should be carried out by one of our recommended service engineers.

# **FAULT FINDING**

Please refer to the Service Helpdesk number on the final page of this manual.

# **SPARE PARTS LIST**

# Spare Parts for cupboards

Part Number	Description	Used on
CA150	Castor	All
DS29	Door slide	All
EC04	Handle end cap	All
EC17	Electronic controller	All
EL177	Bains Marie element 1.1kW	P6B2, P6B4 (short), P8B4 (short),
		P8B4PT (short)
EL232	Cupboard element 2.5kW	P6B4, P6B5, P6P4, P6P5, P8B4, P8B4PT, P8B5, P8B5PT, P8B6, P8B6PT, P8P4, P8P4PT, P8P5, P8P5PT, P8P6, P8P6PT
EL236	Cupboard element 1.5kW	P6B2, P6B3, P6P2, P6P3, P8B3, P8B3PT, P8P3, P8P3PT
EL279	Bains Marie element 1.35kW	P6B3, P6B4 (long), P6B5, P8B3, P8B3PT, P8B4 (long), P8B4PT (long), P8B5, P8B5PT, P8B6, P8B6PT
FA106	Cupboard fan	All
FA120	Cooling Fan - controller	All Bains Marie models
HA105	Handle	All
KN203	Control Knob	All Bains Marie models
NE38	Green neon	All
PL157	Plug & lead	P6B2, P6B3, P6P2, P6P3
SB05	Gastronorm divider - 534mm	All Bains Marie models
SB06	Gastronorm divider - 327mm	All Bains Marie models
SH119	Shelf – 643mm	P6B3, P6B4, P6B5, P6P3, P6P4, P6P5, P8B3, P8B3PT, P8B4, P8B4PT, P8B5, P8B5PT, P8B6, P8B6PT, P8P3, P8P3PT, P8P4, P8P4PT, P8P5, P8P5PT, P8P6, P8P6PT
SH122	Shelf - 324mm	P6B3, P6B5, P6P3, P6P5, P8B3, P8B3PT, P8B5, P8B5PT, P8P5, P8P5PT
SH125	Shelf – 788mm	P6B2, P6P2
TE40	Terminal block – 3 way	P6B2, P6B3, P6P2, P6P3, P6P4, P6P5, P8B3, P8B3PT, P8P3, P8P3PT
TE47	Terminal block – 7 way	P6B4, P6B5, P8B3, P8B3PT, P8B4, P8B4PT, P8B5, P8B5PT, P8B6, P8B6PT, P8P3, P8P3PT, P8P4, P8P4PT, P8P5, P8P5PT, P8P6, P8P6PT
TH34	Thermostat – Bains Marie	All Bains Marie models
TU01	Silicone rubber tube	All Bains Marie models
VA19	Drain valve	All Bains Marie models

# Spare Parts for gantries

Part Number	Description	Used on
GL517	Sneeze screen – 885mm	PG62A, PG62H
GL518	Sneeze screen – 1110mm	PG63A, PG63H
GL519	Sneeze screen – 1435mm	PG64A, PG64H
GL520	Sneeze screen – 1760mm	PG65A, PG65H
IN42	Plain insert	All PS8 models
IN82	Ribbed insert	PG64A, PG64H, PG65A, PG65H
LA211	Clip – in lamp holder	All PS8 heated models
LA324	200W Heat lamp	All PG6 heated models
		All PS8 heated models
LA325	Lamp holder	PG62H, PG63H, PG64H, PG65H
LA326	Reflector for lamp	PG62H, PG63H, PG64H, PG65H
LE14	Lens cover for switch	All PS8 heated models
SW34	Switch	All PS8 heated models
TE02	Terminal block - ceramic	All PG6 heated models
		All PS8 heated models

## Spare parts for Accessories

Part Number	Description	Used on
BU62	Bush – tray slide	
EC03	End cap – tray slide	All
EC08	End cap – push bar	All
LO24	Door lock	

# **ACCESSORIES**

Part Number	Description	Used on
PDL2,3,4,5	Door complete with lock	All – order width to suit
PPB6	Additional push bar handle	670 models
PPB8	Additional push bar handle	800 models
CP16	Carvery pad	
PHTC	Ceramic hot tile	All
PHTG	Glass hot tile (factory fitted)	

Gastronorm Kits				
Code	No. 1/1 Gastronorms	No 1/2 Gastronorms		
PGK1	2	0		
PGK2	1	2		
PGK3	0	4		
PGK4	3	0		
PGK5	2	2		
PGK6	1	4		
PGK7	0	6		

## SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

**T** UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
- Product code
- Type number

All available on serial plate

Serial number

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

#### **GUARANTEE**

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.